



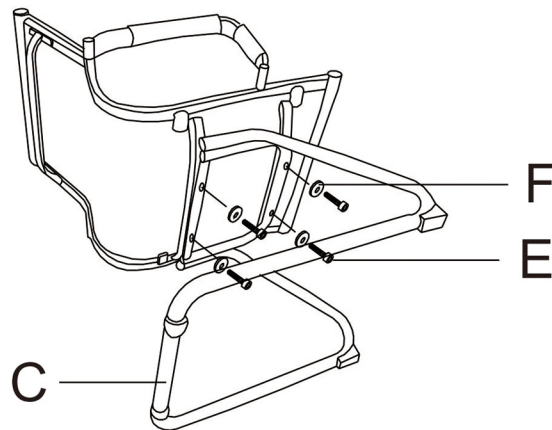

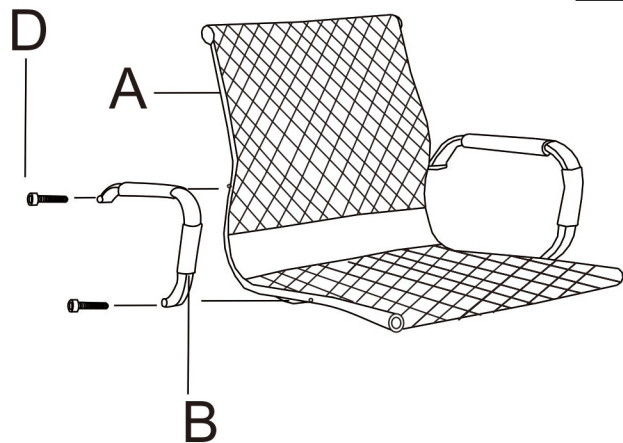




# Инструкция по сборке офисного кресла 6016-3

шаг № 1	шаг № 2
------------	------------



A		1	шт.
B		1	шт.
C		1	шт.
D	 M8*40mm	4	шт.
E	 M8*50mm	4	шт.
F		4	шт.
G		1	шт.

шаг № 3	шаг № 4
------------	------------

